

**Our new scoreboards are essentially the same as the old ones with a few new programming differences.**

Entering a penalty

- Enter the players number (19, 9, 99, etc)
- then press the home/visitor player # button
- if the penalty is more than 2:00, next enter 400, 500, etc
- then press the home/visitor pen time

Removing a penalty

- press the reset button
- enter the player's number
- then press home/visitor player # button

At the beginning of a period with a carryover penalty

- if a penalty is carried over from one period to the next the penalty turns off by default
- at the beginning of each period ensure that the penalty is on
- on the score box controller, it will show 19-2:00,
- if for any reason it shows 19X200, that means that penalty is off
- press the penalty on/off button

Other notes on the new scoreboard

- make sure that the auto horn is on
- make sure the clock is set to count down
- if there is a power flicker in the building ask the staff to reset the breaker
- Function, 1, enter will start a new game

**Standard Scoreboard Operations**

- To begin a new game, press Function, 1 then enter
- To enter a new period length enter the time then press  
Clock Set
- To change the period press Period
- To add a goal press H HOME (blue) or V VISITOR (blue)
- Ensure that Auto Horn is on
- Use the Reset button to clear any score or penalty